

フォレストホール：DMX. No

No.1

負荷名称	回路No	CH.No	DMX.No
1 BOD 赤：作業灯	72	上1	1
	W	上2	2
	78	上3	3
	W	上4	4
	72	中1	5
	W	中2	6
	78	中3	7
	W	中4	8
	72	下1	9
	W	下2	10
	78	下3	11
	W	下4	12
2 BOD 赤：作業灯	72	上1	13
	W	上2	14
	78	上3	15
	W	上4	16
	72	中1	17
	W	中2	18
	78	中3	19
	W	中4	20
	72	下1	21
	W	下2	22
	78	下3	23
	W	下4	24
3 BOD 赤：作業灯	72	上1	25
	W	上2	26
	78	上3	27
	W	上4	28
	72	中1	29
	W	中2	30
	78	中3	31
	W	中4	32
	72	下1	33
	W	下2	34
	78	下3	35
	W	下4	36
4 BOD 赤：作業灯	72	上1	37
	W	上2	38
	78	上3	39
	W	上4	40
	72	中1	41
	W	中2	42
	78	中3	43
	W	中4	44
	72	下1	45
	W	下2	46
	78	下3	47
	W	下4	48
5 BOD	72	上1	49
	W	上2	50

負荷名称	回路No	CH.No	DMX.No	
5 BOD 赤：作業灯	78	上3	51	
	W	上4	52	
	72	中1	53	
	W	中2	54	
	78	中3	55	
	W	中4	56	
	72	下1	57	
	W	下2	58	
	78	下3	59	
	W	下4	60	
	1 CL ○：凸	上手	①	61
			②	62
		③	63	
		4	64	
		5	65	
		6	66	
		⑦	67	
		⑧	68	
		⑨	69	
		10	70	
		11	71	
		12	72	
		⑬	73	
		⑭	74	
		⑮	75	
2 CL ALL凸	上手	1	76	
		2	77	
		3	78	
		4	79	
		5	80	
		6	81	
		7	82	
		8	83	
		9	84	
		10	85	
		11	86	
		12	87	
		13	88	
		14	89	
		15	90	
PSUS		1	91	
		2	92	
		3	93	
		4	94	
		5	95	
		6	96	
		7	97	
		8	98	
		9	99	
		10	100	

負荷名称	回路No	CH.No	DMX.No
PSUS	11		101
	12		102
1SUS	1		103
	2		104
	3		105
	4		106
	5		107
	6		108
	7		109
	8		110
	9		111
	10		112
	11		113
	12		114
	13		115
	14		116
	15		117
	16		118
2SUS	1		119
	2		120
	3		121
	4		122
	5		123
	6		124
	7		125
	8		126
	9		127
	10		128
	11		129
	12		130
	13		131
	14		132
	15		133
	16		134
3SUS	1		135
	2		136
	3		137
	4		138
	5		139
	6		140
	7		141
	8		142
	9		143
	10		144
	11		145
	12		146
	13		147
	14		148
4SUS	1		149
	2		150

負荷名称	回路No	CH.No	DMX.No	
4SUS	3		151	
	4		152	
	5		153	
	6		154	
	7		155	
	8		156	
	9		157	
	10		158	
	11		159	
	12		160	
	5SUS	1		161
		2		162
3			163	
4			164	
5			165	
6			166	
7			167	
8			168	
9			169	
10			170	
11			171	
12			172	
6SUS	1		173	
	2		174	
	3		175	
	4		176	
	5		177	
	6		178	
	7		179	
	8		180	
	9		181	
	10		182	
FRO上 ○：凸	2F下	1	183	
		2	184	
	2F上	3	185	
		4	186	
	3F下	5	187	
		6	188	
	3F上	7	189	
		8	190	
	2F中	⑨	191	
		⑩	192	
FRO下 ○：凸	2F下	1	193	
		2	194	
	2F上	3	195	
		4	196	
	3F下	5	197	
		6	198	
	3F上	7	199	
		8	200	

フォレストホール：DMX. No

No.2

負荷名称	回路No	CH.No	DMX.No
FRO下 ○:凸	2F中	⑨	201
		⑩	202
T・T上 ○:凸	上段	1	203
		②	204
		3	205
		④	206
T・T下 ○:凸	上段	1	207
		②	208
		3	209
		④	210
1TOW上 ○:凸	上段	1	211
		②	212
		3	213
		④	214
1TOW下 ○:凸	上段	1	215
		②	216
		3	217
		④	218
2TOW上 ○:凸	上段	①	219
		2	220
		③	221
		4	222
2TOW下 ○:凸	上段	①	223
		2	224
		③	225
		4	226
FC上		1	227
		2	228
		3	229
		4	230
		5	231
		6	232
		7	233
		8	234
		9	235
		10	236
		11	237
		12	238
FC下		1	239
		2	240
		3	241
		4	242
		5	243
		6	244
		7	245
		8	246
		9	247
		10	248
		11	249
		12	250

負荷名称	回路No	CH.No	DMX.No	
FC前		1	251	
		2	252	
		3	253	
		4	254	
FC中		1	255	
		2	256	
		3	257	
A迫		1	258	
		2	259	
		3	260	
B迫		1	261	
		2	262	
		3	263	
コンダクター			264	
花F上	W	1	265	
		78	266	
花F下	W	1	267	
		78	268	
中LHO中			269	
			270	
			271	
			272	
		72	1	273
		59	2	274
		22	3	275
		40	4	276
				277
				278
				279
				280
中LHO外		72	281	
		59	282	
		22	283	
		40	284	
大LHO中			285	
			286	
			287	
			288	
		72	1	289
		59	2	290
		22	3	291
		40	4	292
				293
				294
				295
				296
大LHO外		72	297	
		59	298	
		22	299	
		40	300	

負荷名称	回路No	CH.No	DMX.No
本F			301
			302
			303
			304
		1	305
		2	306
		3	307
		4	308
			309
			310
			311
			312
中UHO中		71	313
		72	314
			315
			316
			317
			318
			319
			320
			321
			322
			323
			324
			325
			326
	327		
	328		
中UHO中		78	329
		63	330
			331
			332
			333
			334
			335
			336
			337
			338
			339
			340
			341
			342
	343		
	344		
中UHO中		72	345
		78	346
			347
			348
			349
			350

負荷名称	回路No	CH.No	DMX.No		
大UH中	71	1	351		
		72	2	352	
			353		
			354		
			355		
			356		
			357		
			358		
			359		
			360		
			361		
			362		
			363		
			364		
	365				
	366				
	367				
	368				
大UH中	78	3	369		
		63	4	370	
			371		
			372		
			373		
			374		
			375		
			376		
			377		
			378		
			379		
			380		
			381		
			382		
	383				
	384				
大UH中	63	4	385		
		22	5	386	
			387		
			388		
			389		
			390		
			391		
			392		
		譜面灯		393	
		緞テラ		1	394
				2	395
				3	396
					397
					398
	399				
	400				

フォレストホール：DMX. No

負荷名称	回路No	CH.No	DMX.No
			401
			402
			403
			404
			405
			406
			407
			408
			409
			410
			411
			412
			413
			414
			415
			416
			417
			418
			419
			420
			421
			422
			423
			424
			425
			426
			427
			428
			429
			430
			431
			432
客電(残置灯)	オケビ	1	433
	全体	2	434
			435
			436
			437
			438
			439
			440
客電	オケビ	1	441
	大天井	2	442
			443
			444
			445
			446
			447
			448
客電	1F・2F	3	449
	3F・4F	4	450

負荷名称	回路No	CH.No	DMX.No
			451
			452
			453
			454
			455
			456
持ち込み機器用 add:457~510			457
			458
			459
			460
			461
			462
			463
			464
			465
			466
			467
			468
			469
			470
			471
			472
			473
			474
			475
			476
			477
			478
			479
			480
			481
			482
			483
			484
			485
			486
			487
			488
			489
			490
			491
			492
			493
			494
			495
			496
			497
			498
			499
			500

負荷名称	回路No	CH.No	DMX.No
持ち込み機器用 add:457~510			501
			502
			503
			504
			505
			506
			507
			508
			509
			510
マグネット信号使用中につき使用不可			511
			512

